

Learning Mode

For a separate sound bar or device, the remote will not be able to learn how to control it over HDMI and will need to be taught separately.

The remote control can learn a key function from another source remote control.

1. Choose your **target** key on the remote control. It must be one of the following keys: TV/AUX POWER / TV INPUT / VOL+ / VOL- / MUTE. This key will learn a function from the source remote control.
2. Press **4** and **6** for at least three seconds. The **TV/AUX POWER** key will flash twice and remain on.
3. Press your **target** key within 30 seconds:
 - If valid, the TV/AUX POWER key will give a confirmation flash and remain on.
 - If invalid, or you do not press within 30 seconds, the TV/AUX POWER key will give a long flash and return to user mode.
4. Hold the remote control 3 - 6 cm from the source remote control with the IR windows facing each other, then press your **target** key on the source remote control (e.g. if your target key on the remote control is mute, press mute on the source remote control).
5. If the IR signal is received correctly, the **TV/AUX POWER** key will turn off and the remote control will return to normal mode (note: this can overwrite a previously learned code).
6. If the IR signal is not received correctly, or is received after 30 seconds, the remote control will not store the code from the source remote control: the **TV/AUX POWER** key will give a long flash and return to user mode.
7. If the **Back** key is pressed on the remote control while it is waiting for an IR signal, the TV/AUX POWER key will give a long flash and return to user mode. (If the target key is pressed, any learned code on it is cleared.)
8. To clear the target key, press **4** and **6** for at least three seconds. The **TV/AUX POWER** key will flash twice and remain on. Then press your **target** key twice. The **TV/AUX POWER** key will flash to confirm the target key is cleared.